## **ASSET PRODUCT COMPARISON**

	AT312-EQ	AT312-TT	BAT60
PRODUCT FEATURES			
1-Year Warranty	Yes	Yes	Yes
Open Service Plans with No Contracts	Yes	Yes	Yes
30-Day Money Back Guarantee	Yes	Yes	Yes
Ability to Monitor Ignition On/Off	Yes	No	No
Ability to Call Phone Number to Hear Vehicle Location (IVR)	Yes	Yes	Yes
Ability to Monitor One Input	No	No	No
Ability to Monitor Two Inputs	No	No	No
Ability to Monitor Four Inputs	No	No	No
Ability to Create Sub-User Accounts	Yes	Yes	Yes
Ability to Group Vehicles	Yes	Yes	Yes
Reporting Interval (in minutes if not noted)	Daily****	30****	8hr/12hr
Ability to Locate On-Demand (ping at any time)	Yes**	Yes	No
Programming API Scripts	Yes	Yes	Yes
Door Unlock	No	No	No
Starter Disable	No	No	No
Low Battery Voltage Notification	Yes	Yes	Yes
Auto Geofence (Unauthorized Movement Alerts)	Yes	Yes	No
Disconnect Message	Yes	Yes	No
Reconnect Message	Yes	Yes	No
Internal Antennas	Yes	Yes	Yes
External Antennas	No	No	No
Plugs Into the OBDII Port	No	No	No
OBDII Splitter Cable	No	No	No
On-Board Memory Locations	3,000	3,000	2,000
Internal Battery	Yes	Yes	Yes
Motion Sensor	Yes	Yes	No
Adapter Required for 24 Volt Vehicle	No	No	N/A
Waterproof	Yes	Yes	No
ALERT FEATURES			
Ability to Send Alerts to Cell Phone	Yes	Yes	Yes
Ability to Send Alerts to Email	Yes	Yes	Yes
Ability to Set Idle Time Duration Alerts	No	No	No
Ability to Set Off Hour Alerts	No	No	No
Ability to Set Stop Duration Alerts	No	No	No
Ability to Set Speed Alerts	No	No	No
Ability to Set Unauthorized Movement Alerts	Yes	Yes	No
Ability to Set Maintenance Alerts	Yes	Yes	No
Ability to Set Geofence Alerts	Yes	Yes	Yes****



## **ASSET PRODUCT COMPARISON**

	AT312-EQ	AT312-TT	BAT60
MAPPING FEATURES			
Displays All Vehicle on One Mapping Page	Yes	Yes	Yes
Included Current Location, Heading, and Speed	Yes	Yes	No
Ability to View Historical Travel Patterns (breadcrumb)*****	Yes	Yes	Yes*
Ability to Dispatch Closest Vehicle	No	No	No
Ability to Create Driving Directions	No	No	No
Ability to Setup Landmarks	Yes	Yes	Yes
Ability to Set Speed Alerts	No	No	No
Ability to Set Square Geofence (Boundary Alerts)	No	No	Yes
Ability to Set Poly Geofence (Boundary Alerts)	No	No	Yes
Ability to Import/Export Landmarks	Yes	Yes	Yes
Ability to Download Historical Data to Excel	Yes	Yes	Yes
Ability to Change Map Icons/Map Labels	Yes	Yes	Yes
Ability to Export to Google Earth	Yes	Yes	Yes
Ability to Display Real-Time Traffic	Yes	Yes	Yes
REPORTING FEATURES			
Ability to Receive Emailed Reports Daily/Weekly/Monthly	Yes	Yes	Yes
Ability to Generate Stop Report	No	No	No
Ability to Generate All Trips Report	No	No	No
Ability to Generate Landmark Report	No	No	No
Ability to Generate First/Last Trip Report	No	No	No
Ability to Generate First/Last Movement/Ignition Report ***	No	No	No
Ability to Generate Speed Report	No	No	No
Ability to Generate After Hours Report***	Yes	Yes	No
Ability to Generate Daily Detail Report	No	No	No
	No	No	No
Ability to Generate Summary Report	No	No	No
	140		N.
Ability to Generate Idle-Time Report	No	No	No
Ability to Generate Idle-Time Report Ability to Generate Statewide Mileage Report		No No	No No
Ability to Generate Idle-Time Report Ability to Generate Statewide Mileage Report Ability to Generate Consolidated Trip Report	No		
Ability to Generate Summary Report Ability to Generate Idle-Time Report Ability to Generate Statewide Mileage Report Ability to Generate Consolidated Trip Report Ability to Generate Engine Run Time (engine on time) *** Ability to Generate Geofence Report	No No	No	No

<sup>\*</sup>The 12 hour and 8 hour plans are 2 and 3 updates per day respectively; however, the exact interval will vary slightly. This also includes an interval tracking option of 20 events/year. An interval event = 15 min. updates for 50 events (which equals 12.5 hours of continous tracking). Thereafter, the device goes back to the update rate assinged to it.

<sup>\*\*\*\*\*</sup>AT312-TT - Once 3 miles or more is traveled, the unit will track at 30 minute intervals. It will perform an Auto Locate every 8 hours without power and every 24 hours with power.



<sup>\*\*</sup>Can only ping when unit is not in deep sleep mode, unit will report an Auto Locate before entering sleep mode and will wake up on motion or ignition.

<sup>\*\*\*</sup>Ignition wire needs to be connected.

<sup>\*\*\*\*</sup>BAT60 Geofence alerts will be delayed based on reporting interval assigned to unit.

<sup>\*\*\*\*\*</sup>AT312-EQ - Once the 1 mile perimeter fence is broken, the unit will track at 30 minute intervals. It will perform an Auto Locate every 8 hours without power and every 24 hours with power.